


VOLFONIFIT USER MANUAL
LUNETTES 3D ACTIVES DLP®-LINK™
DLP®-LINK™ ACTIVE 3D GLASSES

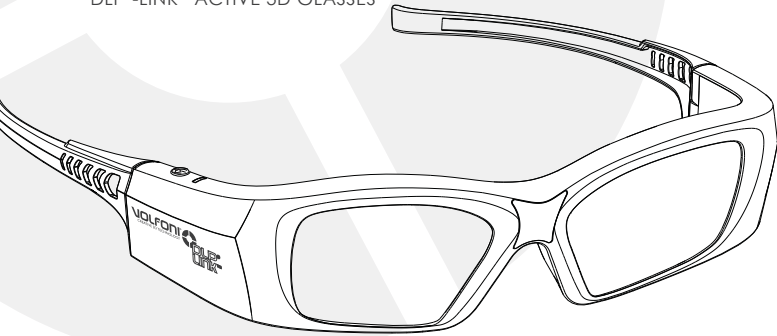

Model : VOLFONI FIT - Reference : VPOP-01000 - DLP®-Link™ active 3D glasses

Product Overview

This DLP®-Link™ 3D active glasses are designed to be used with all 3D DLP projectors and 3D TVs . The DLP®-Link™3D glasses ,equiped with high transmittance and high contrast ratio liquid crystal lenses, offer the brightest 3D visual experience.

Package Contents

1. DLP®-Link™ Active 3D glasses x1
2. Storage Pouch x1
3. Cleaning Cloth x1
4. User's Guide x1
5. USB charging cable x1
6. Interchangeable Nosepiece x3


Specification

Shutters	LCD	Weight	39g
Refreshing rate	96/100/120/144HZ	Transmittance	38+/-2%
Working current	2.8mA	Contrast ratio	1200:1
Power supply	Rechargeable battery	Sync operation	DLP-Link
Battery life	24 hours continuously working	Using range	>10m
Working Condition	Working temperature	0-40°C	
	Storage temperature	-5°C-50°C	

*** Important Notice:**

- For a better performance of the battery, please follow the guide below when using:
- 1) continuously using the glasses until the LED give low battery warning blinking for the first time using, and then full charge the 3D glasses for at least 12 hours;
 - 2) If the glasses not being used, please fully charged the glasses at least one time within each 3 months.

Product Features

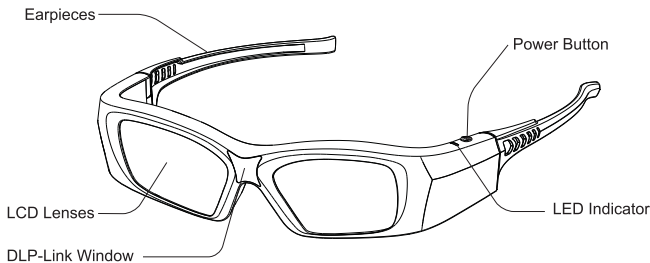

Charge the 3D glasses: Please charge your 3D glasses by connecting the 3D glasses to the USB port of your computer or the 3D glasses charger (sold separately) with supplied USB charging cable when they give low battery warning . Red LED indicator will keep lighting on until the charging is finished. A full charge may take 4 hours.

Operation Guide

Viewing 3D Contents with the DLP-Link 3D Active Glasses:

1. Turn on both your DLP 3D Ready projector and your 3D content source (such as a 3D Blu-ray player).
2. Set your DLP 3D Ready projector in "DLP 3D" BEFORE you turn on your content source like a 3D Blu-ray player. The Blu-ray player communicates with the projectors to determine whether or not the projector is capable of playing 3D content. If this communication occurs before you set the projector to 3D mode, the player will think that the projector is not capable of displaying a 3D image and will only play the video in 2D format. If this happens, turn the 3D Blu-ray player off, set the projector to 3D mode, and then turn the 3D Blu-ray player back on so the communication between the two can connect correctly.
3. Turn on your 3D content source. You can now press and release the Power ON/OFF button to turn on your DLP-Link 3D Glasses and start watching 3D content.

* The LED indicator will light on for 1.5s to indicate the glasses are turned on, If the battery is low , the LED indicator will blink once per second , please charge your 3D glasses if this happened.

4. Turn off your 3D glasses by pressing and holding the power button for about 1.5s after finish your 3D viewing.

* The LED indicator will blink 3 times to indicate the glasses are turned off. when the sync signal is blocked or the projector is exited "DLP 3D" mode, the glasses will turn off after 5min standby and will "wake up" if the signal is the sync signal is received within this period.

Maintain the 3D Active Glasses:

Clean the 3D active glasses with a clean and lint-free cotton cloth or with specified disposable lenses cleaning tissue.

Use Tips

The 3D glasses will activate their Auto OFF and Auto run intelligently in the following conditions.

1. The 3D glasses are standby (for a period of 5 minutes) when powered on, and they will turn into working mode once received the 3D sync signal during standby mode, otherwise, the glasses will automatically turn off with the green LED indicator blinking three times.
2. If the 3D glasses become disconnected with the SYNC signal because of : 1> incorrect distance and or angle, 2> input source changed, 3> switched to 2D mode, they will automatically work for a period of 5 seconds. The glasses will resume working once a 3D sync signal is received, otherwise, the glasses will enter into standby mode (for 5 minutes).

Troubleshooting

Q1: What can I do if there is no 3D effect after I have put on and turned on the glasses ?
Try this:

1. Please check if the projector/TV setup is in DLP 3D mode or not.
2. Check the battery volume of your glasses, please change it if low in power
3. Make sure you are watching in 3D sync signal covered area .

Q2: Why do the lenses blink when watching 3D films ?

Try this:

1. Please change the battery immediately if the battery is seriously low.
2. Interference such as magnetic fluorescent lamps 50 or 60Hz may cause flickers, please turn off interference source if this occurs.

For any others questions, please contact Volfoni.

Cautions

1. The 3D glasses are used for 3D content viewing only. Do not use them for general eye wear purpose, such as sunglasses and general eye wear. Doing so may result in injury.
2. The glasses are powered by a rechargeable lithium-polymer battery, please charge the glasses with a standard 5V USB connection and do not damage the battery, or may result in injury or fire.
3. Do not place the glasses in a location exposed to direct sunlight, heat, fire or water. this may result in product malfunction or fire.
4. Clean the 3D glasses with a clean, lint free, dry, soft cloth. Any chemical cleaning agent spray on the 3D glasses may damage the product surface or cause product malfunction.
5. Do not apply force to the 3D glasses. Dropping or bending may damage the product.
6. When watching a 3D video, do not place anything fragile nearby. Involuntary movement or surprised reaction may occur as a result of certain 3D content which result in surrounding objects being broken or hurt yourself.
7. Please watch 3D content in signal covered area, and make sure no object is placed close to the front of DLP-Link window.
8. 50Hz or 60Hz magnetic fluorescent lamp may cause flicker to your 3D glasses. Turn off the lamp if this happens.
9. Do not use the 3D glasses if there are any wire exposed or cracks to the lens.
10. For comfort replaceable nosepieces are applied to the glasses. Please place the nosepieces out of children's reach to prevent children swallowing the nosepieces. Children must use the glasses under their parents' supervision.

4

Safety Precaution

1. We recommend pregnant women, people with heart disease or epilepsy and people who are easily nauseous should not watch 3D content.
2. Due to the stereoscopic effects and the uncompleted visual development of younger children under 3 years of age we recommend you not allow them to watch 3D content. Watching 3D for a long time may affect their visual development.
3. Watching 3D content for a long time may cause headache or eyestrain to you, please stop watching if you have any uncomfortable feeling and take a rest immediately. Please consult a doctor if the feeling do not release.
4. Some individuals may experience seizure or other complications when exposed to certain visual images, including flashing lights or patterns that may appear in a video or games. If you or any of your relatives have a history of seizures or epilepsy, consult a doctor before watching.

Regulatory standards

European Union - Disposal information :



This symbol means that according to local laws and regulations your product should be disposed of separately from household waste. When this product reaches its end of life, take it to a collection point designated by local authorities. Some collection points accept product for free. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Union Européenne - informations sur l'élimination

Le symbole ci-dessus signifie que vous devez vous débarrasser de votre produit sans le mélanger avec les ordures ménagères, selon les normes et la législation de votre pays. Lorsque ce produit n'est plus utilisable, portez-le dans un centre de traitement de déchets agréé par les autorités locales. Certains centres acceptent les produits gratuitement. Le traitement et le recyclage séparé de votre produit lors de son élimination aideront à préserver les ressources naturelles et à protéger l'environnement et la santé des êtres humains.

FCC Compliance Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interferences that may cause undesired operation.

5